



WASHING INSTRUCTIONS FOR MACHINE WASHABLE VERTICAL FABRICS IMPORTANT -

Please read these instructions carefully before proceeding. Only follow the below if you have bought a machine washable fabric, otherwise these instructions may damage your slats.

PREPARATION Before removing the slats from your headrail, carefully unclip the chains at the bottoms of the slats and slide out the weights. Remove the slats from the track taking care not to crease them.

Lay the slats, one on top of the other, on a flat surface. The top hem of each slat should be placed just below the top hem of the slat underneath. The edges of the slats should all be in line with each other.

Starting at the top, tightly roll up the slats, making sure that there are no creases and that the edges of the slats stay in line. If the finished roll is over 8" (200mm) in diameter, divide the slats into smaller sets.

Place an elastic band or tie a tape around the roll to hold it firmly. However, care must be taken to ensure that this band or tape does not distort the fabric.

WASHING Place one roll only into a bottom corner of a pillow case and knot the case so that it holds the roll securely.

Place the case in the washing machine. Only one roll must be washed at a time.

Set the machine to the wash cycle for 'woollens' and cancel the final spin. If in doubt, a gentle wash with three rinse cycles is recommended. The water temperature should be 40°C. Use a proprietary detergent in the quantity specified.

DRYING Stand the roll, still secured by the band, on its end to allow any excess water to drain away. After an hour undo the roll, re-insert the weights and hang the slats out of direct sunlight and allow them to drip-dry. They should not be hung in direct sunlight until they are perfectly dry.

DO NOT IRON Hang the slats on the track and replace the weights and chains. In the unlikely event of a loose thread at the edge of a slat do not attempt to pull it out. Trim it neatly with a pair of scissors.